



Refrigerator - freezer

OWNER'S MANUAL

**MODEL: RF 1220S
RF 1220W**

PLEASE READ THE OWNER'S OPERATION MANUAL CAREFULLY BEFORE USING

TABLE OF CONTENTS

Warranty.....	a-b
Picture of the Refrigerator Freezer.....	1
Installation Instructions.....	2
Important Safety Instructions.....	3
Usage Instructions.....	3-4
Efficient Use of your Appliance.....	5
Maintenance.....	6
Installing & Removing Components.....	7
Normal Functioning of the Unit.....	7
Troubleshooting.....	8
Company Information.....	9

WARRANTY INFORMATION

Your appliance is protected by this warranty under normal, personal, family or household use (1 Year), and limited commercial use (90 days), in the USA and Canada.

WARRANTY

ConServ Appliances undertakes to the consumer-owner to repair or, at our option, to replace any part of this product which proves to be defective in workmanship or material under normal personal, family or household use, in the USA and Canada, for a period of one year from the date of original purchase. For commercial use, the product is warranted for a period of 90 days. During this period, we will provide all labor and parts necessary to correct such defect, free of charge, if the appliance has been installed and operated in accordance with the **ConServ** Appliances' written instructions with the appliance. Ready access to the appliance, for service, is the responsibility of the consumer-owner.

EXCLUSIONS

In no event shall the **ConServ** Appliances be liable for incidental or consequential damages or for damages resulting from external causes such as abuse, misuse, incorrect voltage or acts God. This warranty does not cover service calls which do not involve defective workmanship or materials covered by this warranty. Accordingly, diagnosis and repair costs for a service call which does not involve defective workmanship or materials will be the responsibility of the consumer-owner.

Specifically, the following work is not covered under warranty and does not constitute warranty work:

Installation e.g. improper hook-up or leveling

Maintenance e.g. keeping the unit clean

Most work is covered. The defining factor is, has the machine malfunctioned (**ConServ** Appliances is responsible) or has the customer omitted or done something to cause machine to malfunction (customer is responsible). Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

WARRANTY SERVICE

This warranty is given by:

ConServ Appliances
2801 W Sam Houston Parkway N, Ste. 130
Houston, TX 77043-1611
Tel: 713-933-1474
Fax: 713-933-1475
Toll Free: 800-935-1955

Service under this warranty must be obtained by the following steps, in order:

Call an Authorized Service Agent (obtain number of nearest agent from your dealer or by calling 1-800-776-3538). Under normal circumstances, Service will be provided during regular business hours (9:00 a.m. to 5:00 p.m. Weekdays).


GENERAL

Since it is responsibility of the consumer-owner to establish the warranty period by verifying the original purchase date, the **ConServ** Appliances recommends that a receipt, delivery slip or some other appropriate payment record be kept for that purpose. Remember to send in your Warranty Registration Card so that a proof of your purchase exists with the **ConServ** Appliances. You can also register online at **www.appliancedesk.com/warranty**. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

CONTACTS

Service:	1-800-776-3538 custserv@appliancedesk.com
Parts & Accessories:	parts@appliancedesk.com

PICTURE OF REFRIGERATOR-FREEZER

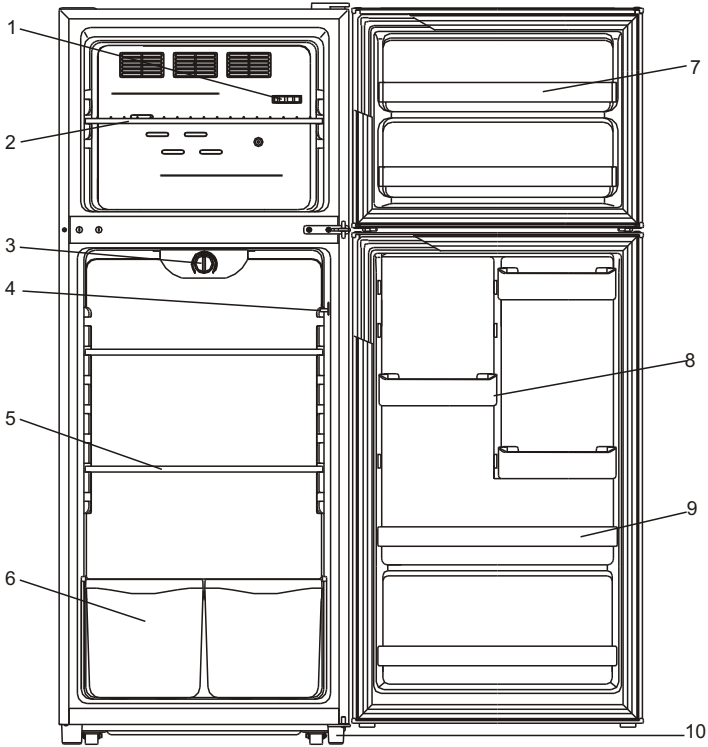


- 1.Freezer temperature control knob
- 2.Freezer compartment shelf
- 3.Refrigerator temperature control knob
- 4.Lamp switch
- 5.Refrigerator compartment shelf
- 6.Vegetable bin


- 7.Freezer door rail
- 8.Can rack
- 9.Simple rack(long)
- 10.Adjustable feet

INSTALLATION INSTRUCTIONS

1. Install on a completely flat and rigid surface. Level the refrigerator by rotating the leveling legs located at the front two corners. The refrigerator is then securely positioned.

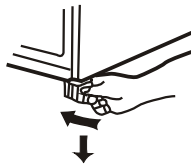

2. Leave at least one inch between both sides of the refrigerator and the wall, and at least between the top of the refrigerator and the surface immediately above, so that all sides are properly vented.

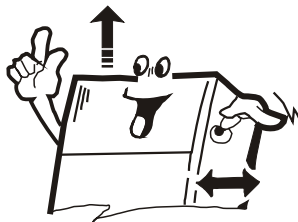


3. Choose a location which is not exposed to sunlight, relatively free from dust, heat and humidity, and offers good ventilation.



IMPORTANT SAFETY INSTRUCTIONS

1. The power plug should have its own socket, an adapter may cause the socket to overheat.

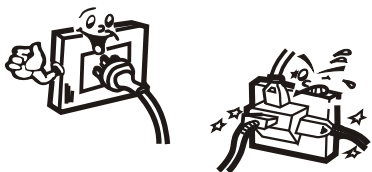

2. Don't store flammable materials such as LP gas glue etc in the refrigerator.



3. The appliance is not intended for use by young children or handicapped persons without supervision ; Young children should be supervised to ensure that they do not play with the appliance.
4. If the power cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

IMPORTANT SAFETY INSTRUCTIONS



5. WARNING---The customer should not replace or repair the power cord and plug, only trained and qualified service personnel should repair or service this appliance.
6. Prevent water from spilling on the refrigerator, this may cause malfunction or electric shock.
7. When gas leaks from its container, don't pull the plug, out or in, for it may cause sparks and fire.



USAGE INSTRUCTIONS

1. Temperature adjustment . . . Usually in Mid position

Temperature knob is to be adjusted temperature of refrigerator and freezer. Normally, You could place the knob at Mid position. Please turn the knob on the "dot" if the user rapidly freezes the food. After freezing, please turn the knob on the "figure".

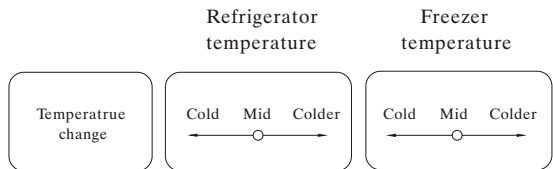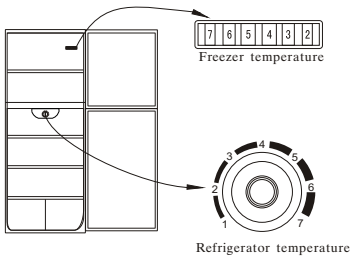

USAGE INSTRUCTIONS

2. Freezing

Meats frozen freshly can help maintain their nourishment.

3. Refrigeration

- Fruits, vegetables are to be stored in vegetable crisper. Wrap them with fresh preservation paper to avoid drying.



- Foods rich in moisture such as vegetables should be stored in the front bottom part of the refrigerator compartment to avoid being frozen.




4. Placement of food

- There should always be some space between food to maintain cold air circulation.



- Food should be wrapped tightly to avoid becoming dry.

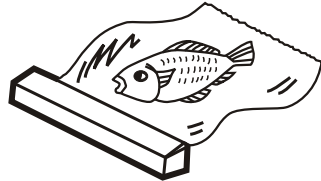

- Hot food should be cooled down before being placed in the appliance to keep the internal temperature low and reduce energy consumption.



5. Automatic defrosting

Complete automatic defrosting process is adopted to the design of this refrigerator.

EFFICIENT USE OF YOUR APPLIANCE


1. The more food is put in the refrigerator or the more frequent and the longer the doors are opened, the more the electric consumption will be, eventually leading to malfunction.



2. It is better not to place objects which are too heavy, pointed or are corrosive on the refrigerator.



3. Only replug the electric power after waiting at least ten minutes.

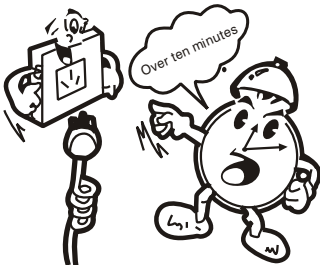

4. Don't store bottles in the freezer, so as to prevent them from breaking.



5. Open the doors infrequently possible during power failure.




6. Don't touch food or containers in the interior compartment with your wet hands so as to prevent frost.



MAINTENANCE

1. While cleaning the refrigerator, pull out the power plug, rub carefully with a piece of cloth soaked with natural cleanser then wipe with clean water.

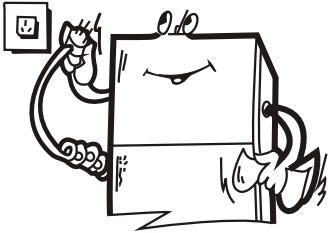

2. Cleansers such as soap powder, abrasive cleaning powder, alkaline cleansers, chemical cloth, thinner, alcohol, acid petroleum product and hot water should not be used to clean the refrigerator as they may damage the painted cover and plastics.




3. The drain pan should be cleaned at least once a year.



4. If the refrigerator has not been used for a long time, pull out the plug, clean and dry the interior compartment, then close the doors tightly.




5. As the door gasket can easily become dirty clean it frequently.

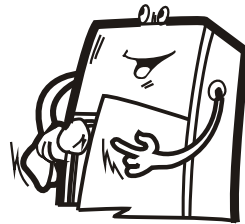

INSTALLING AND REMOVING THE COMPONENTS


1. To dismantle the slide shelf, pull it straight upward. Installing it just in the opposite way.

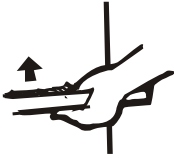

2. If you need to replace the bulb, follow the instructions below

- (1). Pull out the power plug,
- (2). Turn bold counterclockwise
- (3). Hold both sides of lamp-holder and remove the cover as shown below.
- (4). Unscrew the old bulb; replace with the new bulb,
- (5). install the bulb again.

Note: the lamp power is 10W.

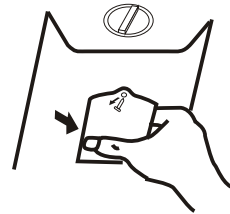

NORMAL FUNCTIONING OF THE UNIT

1. The sides of refrigerator heat up. while the condenser is working, but this will not influence storage performance.

2. It takes time for the temperature of the freezer and refrigerator compartments to become cold while the refrigerator is working:

If the temperature of the two compartments are higher while the refrigerator is working, it takes time for the temperature of the two compartments to decrease.

3. The surface of the compressor becomes hot: It is normal for the surface of the compressor to get hot in good working condition. Don't touch it with your hands.

4. When you hear a sound like water flowing:

This is actually the refrigerant (cooling gas) flowing.

It does not indicate a malfunction.

5. When condensation forms on the outside of the refrigerator:

Condensation may form on the outside when the humidity is high e.g.

during rainy season. This is the same as when chilled water is poured into a glass. It does not, therefore, indicate a failure. Wipe the surface dry with a dry cloth.

TROUBLE SHOOTING

If any case of malfunction, please inspect and dispel it according to the methods shown in the following table:

Problem	Solution
Not cooling	Check for power failure. Check if the power cord is plugged into the power outlet. Check that the fuse (or circuit-breaker) has not blown.
Not cooling sufficiently	The food may be packed too tight together which may block the flow of cool air. The temperature control dial may not have been set properly. The door may not have been closed properly. The door gasket may be damaged. The refrigerator may not be well ventilated. There may be insufficient space between the refrigerator and the surfaces immediate to the sides and top.
Foods frozen in the refrigerator compartment	Have the temperature controls of the compartment and chilled case been set to "colder" position? Is the normal surrounding temperature below 5°C? Is the food packed in too tightly?
Water leaks from refrigerator compartment	Is the drainage pipe blocked? Is there any leakage from some objects stored in it?
Noises	Is the refrigerator installed firmly? Is it balanced? Has the refrigerator been struck by some other objects?
Compressor does not stop working automatically	Is the food packed in too tightly? Are the doors opened too frequently or too long? Are the temperature controls of freezer and refrigerator compartments set to "colder" position?

If the above methods does not solve the problem, please contact the service at 1-800-490-8018 for further assistance.

SERVICE & SUPPORT:
custserv@ApplianceDesk.com
(800) 776-3538

ConServ Appliances
2801 W Sam Houston Pkwy N, Suite 130
Houston, Texas 77043-1611
Phone (713) 933-1474 Fax (713) 933-1475
All rights reserved.

Manual subject to change without notice